



EXECUTIVE CAR SEAT COVER

INTRODUCTION

Congratulations on your purchase. You have chosen a product from high quality.

These instructions for use are an integral part of this product. Before using the

device, please read carefully all operating instructions and safety instructions. Use

this product only in accordance with the instructions and in the field of

application specified. If you give the product to others, also give them this

document.


● SCOPE OF DELIVERY




2 x front seat covers
2-5 x headrest covers



2 x front seat covers
2-5 x headrest covers

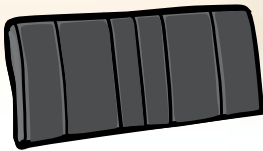


1 x bench seat back cover
1 x rear seat cover

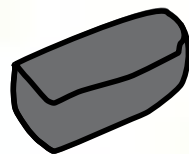

1 x bench seat back cover
1 x rear seat cover



Metal hooks (in

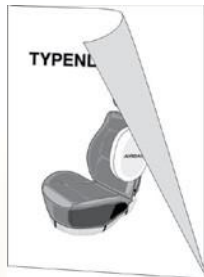

Metal hooks (in

Safety instructions

1. The first assembly must be carried out correctly, the correct fixing of the cover on the seat being absolutely necessary to guarantee safety.
2. Always clean and maintain the car seat cover to enable it last longer.
3. Avoid contact with sharp objects.
4. Refer services to an engineer if need be.



⚠ WARNING!

RISK OF ASPHYXIA!

Hold children away from the packaging.

detailed attached.

Correct seat allocation (driver's seat and passenger seat).

The appropriate assignment can be recognized by the designation "Airbag" on the

seat cover. This designation must be on the outside

backrest (see fig. 1.0).



- The headrest inserts, the backrest adjustment levers / casters and the armrests must not be covered by the seat cover.
- It is necessary that the notches are positioned correctly. Please respect the chapter "Assembly".
- The offset seat covers must be repositioned. If not no longer possible due to excessive wear, the cover must be removed or replaced.
- Do not handle the openings of the seat covers under any circumstances (covering, stitching or repairing them on their own).
- This protective cover has been tested by IMTECH ENGINEERS.

CAUTION! If the assembly has not been carried out correctly, correct deployment of the airbag in the event of an impact cannot be guaranteed

Assembly

You will need: sharp scissors

Maintenance instructions



To hand wash



Do not bleach



Do not wring



Do not iron




Do not dry clean


INSTALLATION GUIDE

CAUTION


- Always wear eye protection when installing covers.
- Elastic straps can snap back at you if released suddenly.
- The included plastic strip is useful for pushing cover and straps through small spaces.

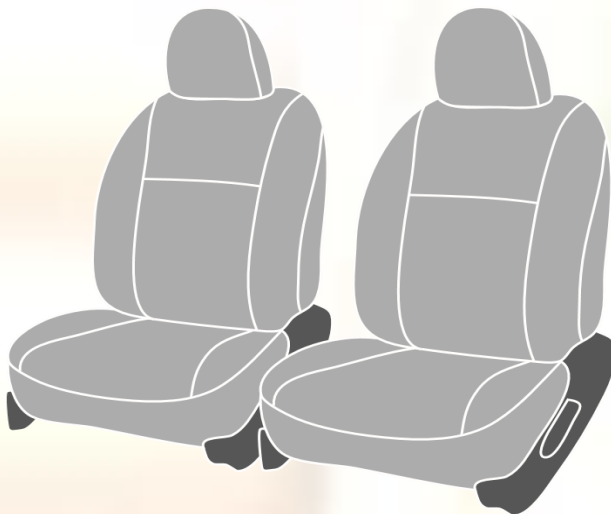

Headrest Cover Installation

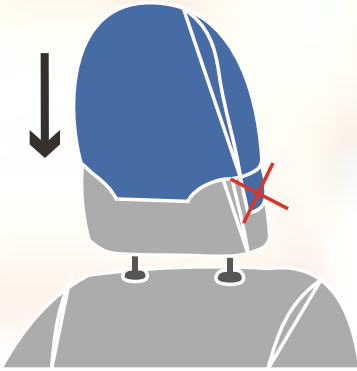


- With the headrest installed in the seat pull down on the front and back of the headrest cover.
- DO NOT pull on the side flaps.
- Smooth cover in place and tuck in cover around any buttons.

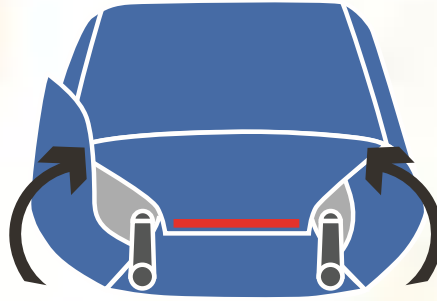

- Headrest covers will have either an elastic edge or a velcro closure.
- Attach velcro together and tuck in side flaps if present.


- Repeat on the opposite side if applicable.

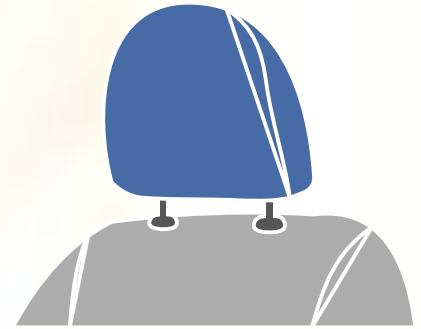

Tips


- Try turning the cover half inside out, positioning the top and rolling the cover down.
- Ensure all the seams are aligned for proper fit.
- Center rear headrests may have two holes in the back of the cover. Feed the posts through these holes before proceeding.

Headrest Removal

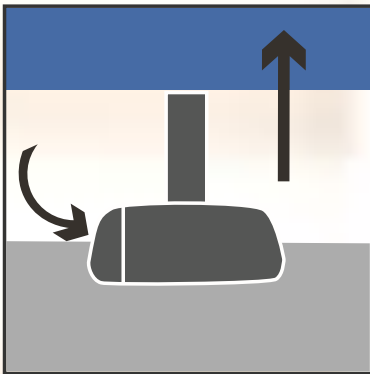


Tab Removal

- Push in tab on guide post while lifting the headrest.
- Repeat on the opposite side if applicable.

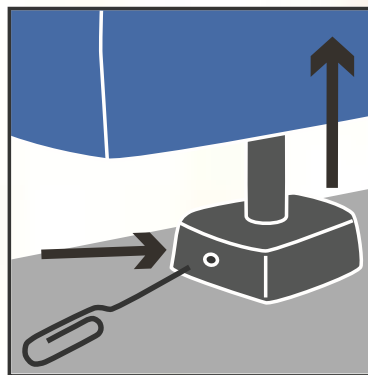

Pin Hole Removal

- Insert a paperclip end or small allen key into the pin hole.
- While pressing the tool in, lift the headrest.

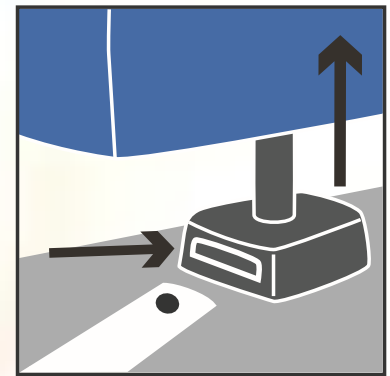




Slot Removal

- Press into the slot with provided install tool or finger while lifting headrest.
- Repeat on opposite side if applicable.

- Headrests may have a combination of removal methods (tab & pin, tab & slot, pin & slot).
- Some headrests may require assistance to remove.
- Some headrests have tricks to finding the removal method.
- Check to see if your headrest folds forward and has pin holes on the back.
- Push down fabric around posts to check for hidden plastic guide posts.

- If you do not see any of the above methods for removal, check the seat back section of your covers for an opening in the top of cover.

Backrest Installation

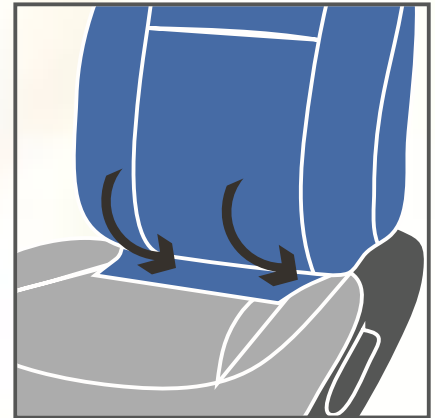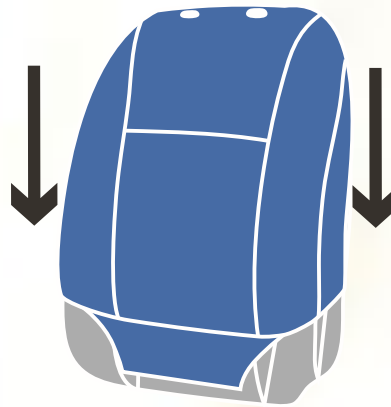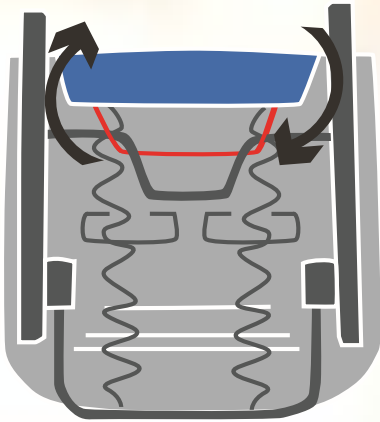

Backrest Bottom Flap


- Find the elastic strap(s) at the edge of the flap.
- Unhook the elastic loop or plastic clip.
- Reattach the strap(s) and attach the flap on the cover with velcro or elastic cords once the installation is complete.

Tips

Installation


- Match cutouts in the cover with any headrest guides, armrests, and levers.
- Airbag tags (newer models) and openings (older models) will face the door.
- Smooth the cover down over the seat.

- Push the flap through the gap between the backrest and bottom.
- Ensure all the seams are aligned for proper fit.

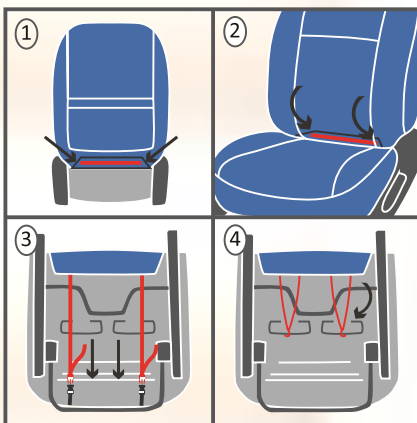


Attachment Methods

1. Hook velcro to the back of the cover.
2. Hook velcro to the bottom cover.
3. Buckle straps to the bottom cover.
4. Hook elastic shock cord under the seat.

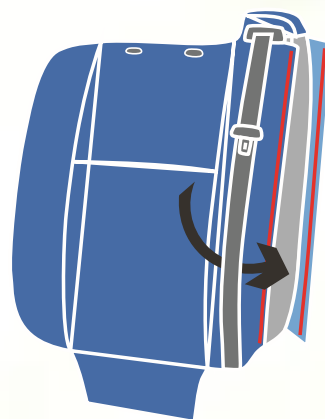

Integrated Seatbelt

- Open velcro side closure on cover and pass the front of the cover underneath the seatbelt before closing the velcro again and proceeding with the installation.

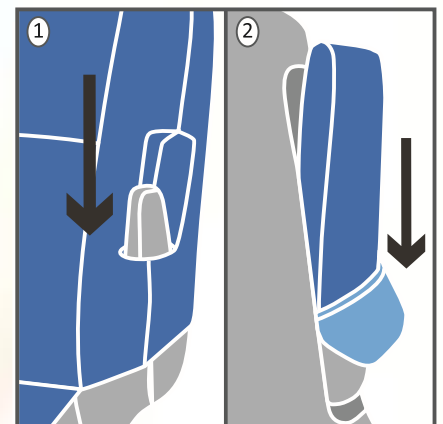




Integrated Armrest

1. While pulling seat back cover down, pull the armrest through.
1. Tuck the material of the cover in around the armrest.
2. Put the armrest cover on halfway inside out, then unroll the rest of the way down.

- The covers may be tight and cling to your seat. Ease them on gradually.
- If you are struggling to put the cover on try turning the cover half inside out, positioning the top and rolling the cover the rest of the way down.

- Alternatively a flexible piece of plastic, like the bag the covers came in, can be placed between the cover and the seat to decrease friction. Remove plastic after installation is complete.



Bottom Installation

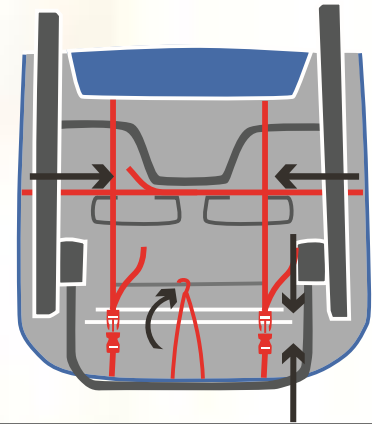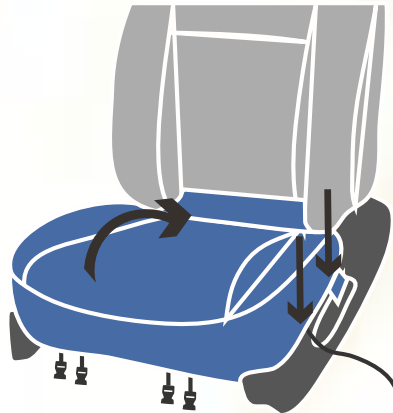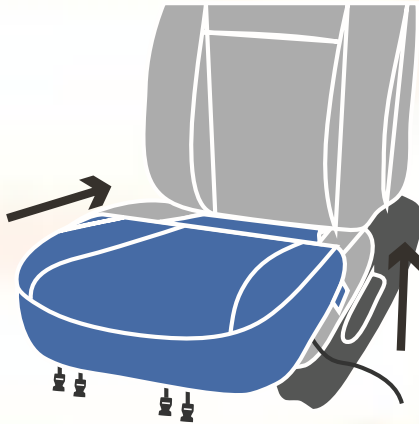

Installation

- Slide the cover over the front of the seat, lining up the seams at the front edge of the seat with the cover.
- Smooth the cover back to the gap between the backrest and bottom.

Tips


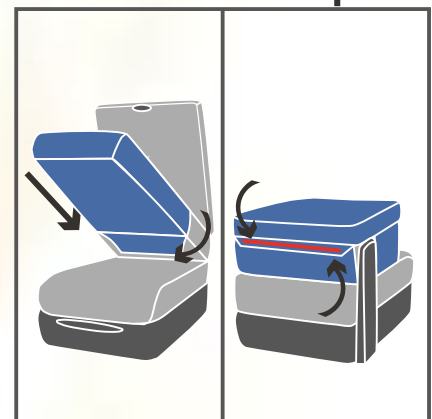
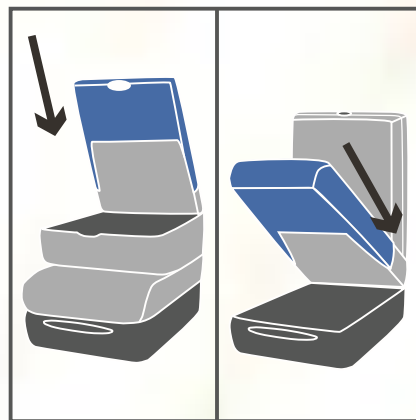


- Buckle straps front to back.
- Connect velcro straps side to side.
- Hook any elastic shock cord straps to the underside of the seat.

- Push the flap through.
- Tuck the sides of the cover into any plastic trim.
- Push any velcro straps, anchor flaps, or anchor tabs between the plastic trim and the seat.

- Attach the velcro at the beginning of the flap to the velcro on the backrest cover if present.
- If the bottom cover seems too short to cover the areas closest to the backrest, try smoothing and pulling the cover towards the back more.
- Some covers may have velcro tabs that hook to the carpet on the bottom of the seat.

Center Console Installation

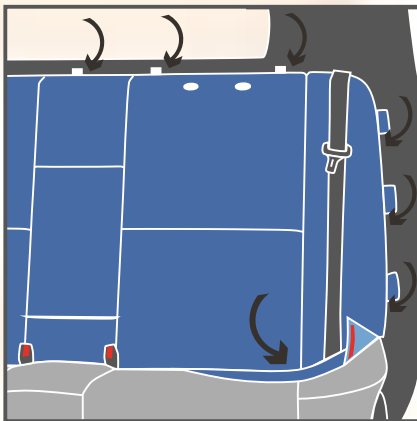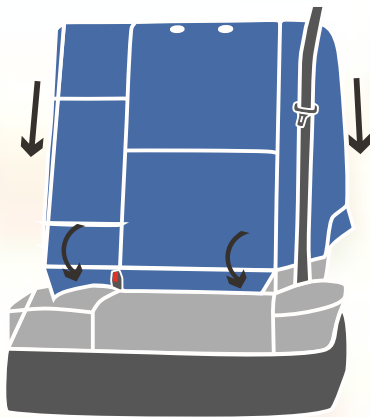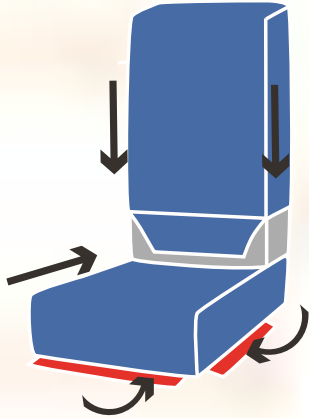


Opening Lid & Bottom Installation

- Slide lid and bottom covers on, feeding the latches through the provided cutouts.
- Attach any velcro tabs to carpet and hook any straps present together.

Opening Backrest Installation

- Slide and smooth cover on.

Seatback Installation

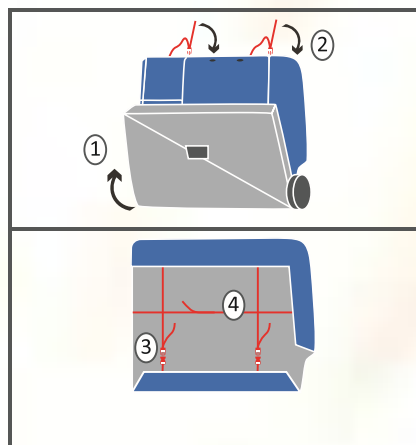


- Attach any velcro straps across to hold it in place.
- Attach the velcro edge on the backrest cover to the velcro edge on the lid cover.

Non-Opening Installation


- Slide and smooth the top and bottom covers on.
- Attach velcro tabs on bottom cover to the carpet.
- Attach velcro closure together at the back of the top section.

Installation

- Slide the cover over the seat, lining up the seams and smoothing as you go.
- Tuck the cover in around any headrest posts, levers, or openings.

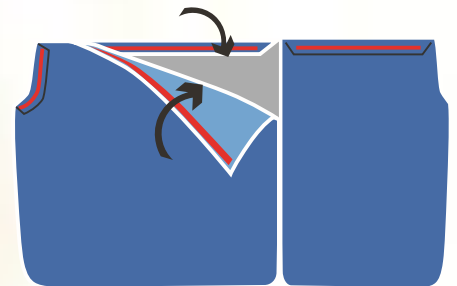

- Push the flap between the seatback and bottom.

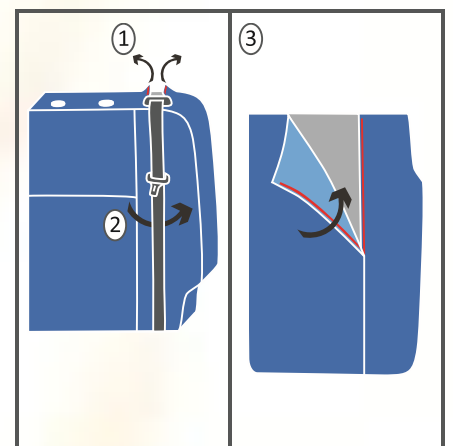


Integrated Seatbelt

1. Open velcro closure on back or side if present.

2. Slide the cover underneath the seatbelt before proceeding with installation.
3. Reattach velcro and tuck cover in around the seat belt guides.

Car/SUV Style • Fold seatback forward.

- Connect the velcro closure at the bottom (and sides if present) of the cover.
- Hook any short velcro straps to the carpet on the back of the seat.

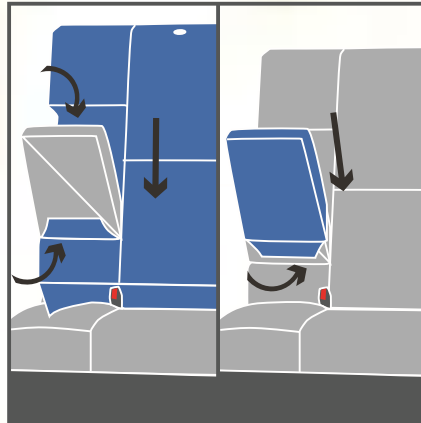


Center Armrest Installation

- Pull the armrest slightly out while putting cover on and put it through the opening in the cover.
- Tuck in anchor flaps/tabs or attach the velcro behind the armrest..
- Slide armrest on and attach velcro.

- The backrest cover will always go underneath the seat belts.
- Moving the armrest up and down can help push the armrest cover into place.
- Tucking the cover in around any plastic trim will give the seat a more polished look.

Bench Bottom Installation

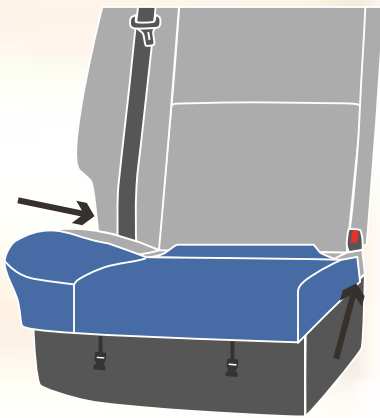


Split Bottom Installation

- Slide the cover over the front of the seat, lining up the seams at the front edge of the seat with the cover.
- Smooth the cover back to the gap between the backrest and bottom.



Seat Bottom Removal (if applicable)

- Look for any plastic tabs at the base of the seat.
- Pull or push in tabs and lift seat.
- If there are no plastic tabs jerk the seat up hard from the front edge.
- One retaining bolt may be located at the back.

Tips


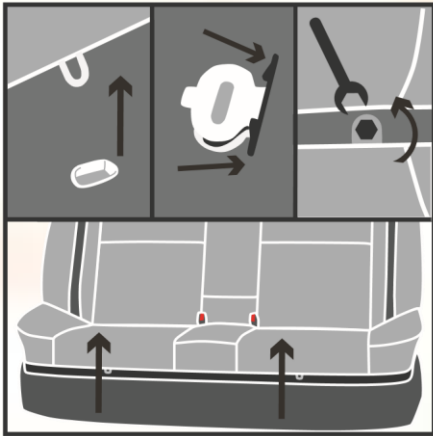


- Attach any straps or velcro under the seat.
- Push the flap through.
- Tuck the sides of the cover into belts. any plastic trim.
- Covers will have openings to accommodate child seat anchors. tabs, or anchor flaps between the plastic trim and the seat. Pull any straps at the openings for the child seat anchors
- If the bottom cover seems to short to cover the areas closest to the backrest, try smoothing and pulling the cover towards the backrest.
- Some covers may have velcro tabs that hook to the carpet on the bottom of the seat.

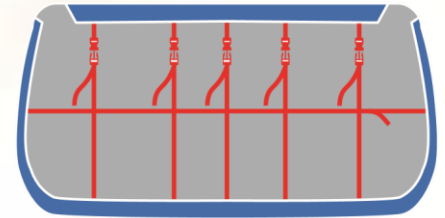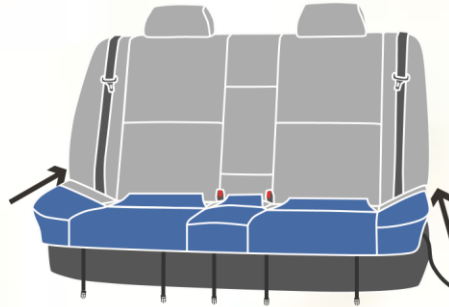

Solid Bottom Installation


- Remove the seat from the vehicle if necessary.

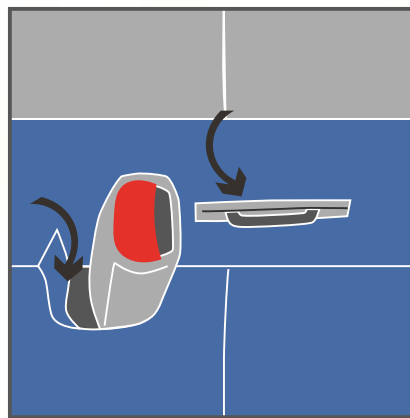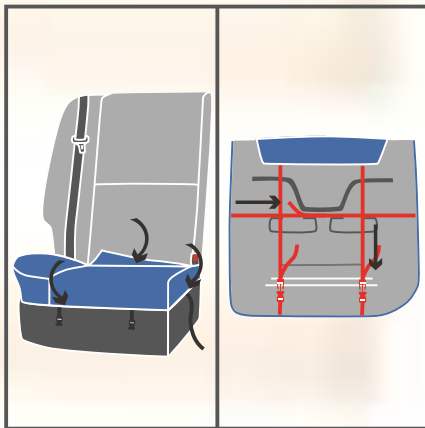

- Buckle the straps from the back

Seat Belts & Child Seat Anchors


- Tuck in any flaps around seat
- Slide the cover onto the seat, from lining up seams and smoothing as you go.
- Tuck in the cover around any seatbelt openings and into any plastic trim.
- Connect the velcro straps the sides under the seat.
- Replace seat if necessary while making sure the seatbelts are pulled back through.

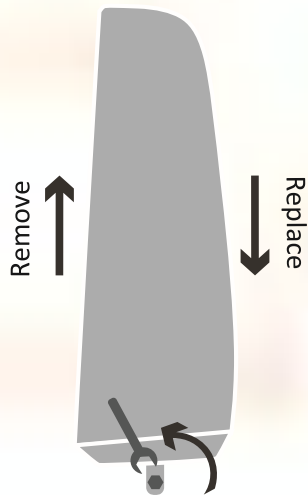

Bolster Removal (if applicable)

- After removing the seat bottom, a single bolt will be revealed.
- Remove the bolt and lift up.
- Install the cover.
- To reinstall, insert the top first and slide down.

Bolster Installation

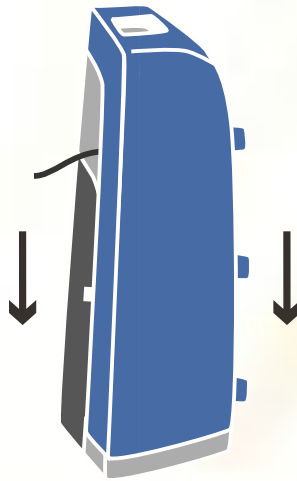

Bolster Installation

- Remove seatbelt from the plastic guide if applicable.
- Smooth the cover on, lining up seams as you go.

- Connect any straps.
- Tuck anchor flaps and/or anchor tabs between the seat and the plastic framing.
- Replace seatbelt in guide.

CARE

Vacuum regularly to remove debris. Spot wash with a damp cloth. Use material specific cleaners for stains. **WARNING:** Machine wash and dry cycles can potentially damage the foam backing on your covers.

Sales service and warranty

You have a 6 Months warranty on this product from the date purchase. This product has been manufactured with care and is subject to meticulous checks before its delivery. Please keep the sales receipt as proof of purchase.

Sales and Service address:

248, Ugbowo, Lagos Road, Uselu,

Benin City, Edo State,

Nigeria.

Hotline phone number: +2348158401828

www.imtechng.com